




User's Manual

ESB107

Multi-function Button

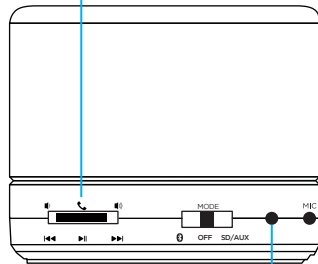

AUX In



LED Indicator



MicroSD Card Slot

Playback Controls

(Does not work in AUX mode)

- ▶▶ Next Track / Fast Forward
Short Press Right
- ◀◀ Previous Track / Rewind
Short Press Left
- ▶ Play/Pause
Short Press Center

(For all modes)

- 🔊 Volume Up
Long Press Right
- 🔊 Volume Down
Long Press Left

LED Light Indicator

(☀ Flashing light/ ● Steady light)

In MicroSD/AUX Mode

- ☀ MicroSD card mode
- Paused
AUX mode

In Bluetooth Mode

- ☀ Entering Bluetooth mode
- ☀ Bluetooth pairing
- Bluetooth mode

Battery Level/ Charging Mode

- ☀ Low battery
- Charging battery

Bluetooth Pairing

1. Switch MODE to Bluetooth mode. The speaker will say, "Bluetooth mode". The LED Light will flash blue 5 times.
2. Short press the multi-function button. The LED light will flash green to indicate bluetooth pairing.
3. Follow the Bluetooth instructions on your cell phone to pair with the speaker.
4. When the speaker is discoverable, tap on "ESB107". Wait for the device to connect.
5. The speaker will say, "Bluetooth connected" when your device is connected. The LED Light will be blue.

Disconnect Bluetooth

When you disconnect from the speaker, it will say, "Bluetooth disconnected". The speaker will flash green when disconnected from bluetooth.

Phone Controls

(In Bluetooth mode)



Answer Call/ End Call
Cancel Dial
Pair Bluetooth

To redial last number double-click the button.
To reject calls hold button for 2 seconds

MicroSD Playback

To use MicroSD Playback, switch the speaker from MODE to SD/AUX. Then press the multi-function button .

MicroSD/AUX Toggle

Hold multi-function button for 2 seconds to switch between MicroSD card mode and AUX mode.

Line-In

To use line-in, switch MODE to SD/AUX. Then press the multi-function button.

Customer Support

Visit ematic.us/support for customer service regarding your device.

To submit a request, fill out the required information online. You will be provided a ticket number regarding your issue, which you can refer to when contacting us further.

©2014 Ematic. All Rights Reserved. Bluetooth and the Bluetooth logo are trademark of Bluetooth SIG, Inc and used by Ematic under a license. 1 Year warranty from the date of purchase, 90 days only on labor.